




www.ProWorldInc.com

Pro World Inc. 961 Bethel Ave. Pennsauken, NJ 08110

Toll Free 800-678-8289 Outside U.S. 856-406-1020 Fax 856-406-1025

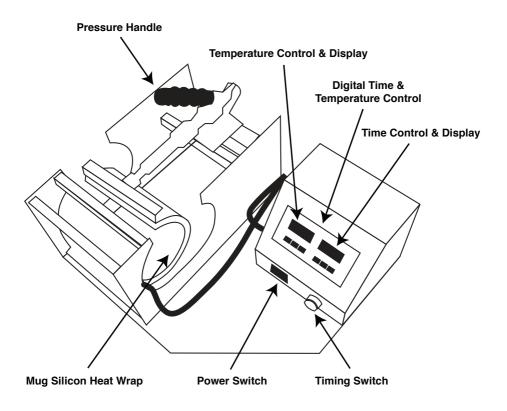

Specifications

Model No: TransPro 3 in 1 Mug Heat Press MGP6051 Voltage 110v Watt: 140W Temperature Range: 0-500 degrees Fahrenheit Temperature control: Adjustable Weight: 20 lbs.

OPERATION INSTRUCTIONS

Read Before Operating

- 1. Be sure to operate with safe ground wire!!!
- 2. Check the voltage before using it. The correct voltage is 110-120v.
- 3. Turn off the machine when not in use.
- 4. Grasp the handle firmly when opening.
- 5. Keep children away from the machine.
- 6. Do not attempt to press products that are not intended for normal heat transfer use.

Operation Procedures

- 1. Plug in unit to grounded outlet and turn on the power switch. The lights will illuminate.
- 2. Adjust the temperature by pressing the set button. Use arrows to choose desired temperature. Press the set button again.
- 3. Allow 20-30 minutes for machine to heat to set temperature.
- 4. Adjust the timer by pressing the set button. Use arrows to choose desired time duration. Press the set button again.
- 5. Place the sublimation paper onto mug (please note that the image side should be facing the mug). The sublimation paper should be placed firmly onto the mug in order to have a successful application; thermal tape can be used.
- 6. Place the mug into the cylinder, pull the handle down to adjust pressure, and press the green start button. You will hear a tone when the time is up. Lift the handle and remove printed mug.

Adjustmentments

- Pressure: Adjust the tip of Pressure handle (5) to increase or decrease the pressure.
- Time: Adjust the Timer Controller button to proper time.
- Temperature: Adjust the temperature button to proper temperature.
- Note: This machine uses a 2 in 1 temperature time controller.

Suggestions

1. Turn off the machine for 2 minutes after 60 minutes of operation to continue working.

Troubleshooting

- 1. Weak color after applying to mug usually means that the applied time is too short.
- 2. Picture is faint usually means that the time was too long and caused the ink to diffuse.
- 3. Part of the color is weak for the finished product usually means that the pressure is not enough or the sublimation coating is not adequate. Increase the pressure or change mug.
- 4. If the mug does not fit it is too big or too small. Change the cylinder.

TRANSPRO WARRANTY

Warranty Coverage

TransPro products offered by Pro World are warranted against defects in material and workmanship. Warranty is void if equipment has been damaged by accident, unreasonable use, neglect, unauthorized and/or improper service, or other causes not arising out of defects in material and workmanship. This warranty does not cover damage caused by normal wear and tear, neglect or lack of proper maintenance.

Warranty Duration

The heating element shall be warranted for the life of the mug press. There is a one (1) year warranty on major components, circuit boards and all other components.

Warranty Performance

During the warranty period, and in the event that a situation cannot be resolved by telephone/email and upon PRE-AUTHORIZATION from Pro World equipment must be shipped, freight prepaid to Pro World for service in the original packaging. After 30 days, all shipping and insurance expenses to and from Pro World of in-warranty equipment is solely the responsibility of the customer. Prior to 30 days the shipping costs will be refunded if Pro World deems the equipment to be defective as stated. Pro World cannot be held responsible for improper handling or any other damage incurred in transit. No charge will be made for labor and components for repair of in-warranty equipment. OUT-OF WARRANTY machines will be charged at the repair rates in effect at the time the machine is received.

Warranty Disclaimers

Pro World shall not be liable for loss of use of TransPro equipment or other incidental or consequential costs, expenses, or damages incurred by the original purchaser or any other user. The above warranty provisions constitute the entire agreement between all parties, and supersede any and all prior written and/or oral representations and understandings.

This "Limited Warranty" applies to all TransPro equipment. However, the procedure for obtaining service may vary outside the continental United States. Contact your Pro World representative for warranty information. The purchaser is responsible for compliance with all local laws, regulations and measure. Agreement shall be governed by and construed in accordance with all applicable laws of said region.



www.ProWorldInc.com

Pro World Inc. 961 Bethel Ave. Pennsauken, NJ 08110

Toll Free 800-678-8289 Outside U.S. 856-406-1020 Fax 856-406-1025